


Flag Set Parts

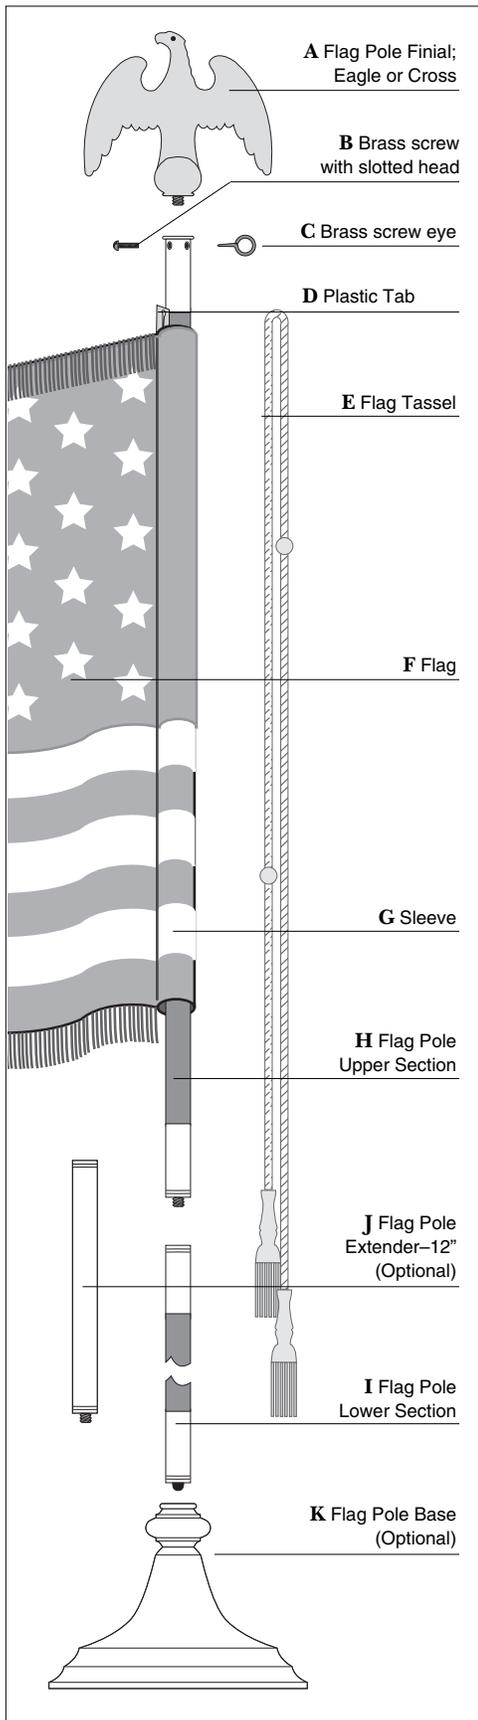

 
Indoor Flag Set

Assembly Instructions


Your Flag Set should arrive in separate packages, which will include: **A** Flag Pole Finial (Eagle, for USA flags; Cross, for church flags); **B** Brass screw with slotted head; **C** Brass screw eye; **E** Flag Tassel; **F** Flag; Two Wood Flag Pole Sections; **H** Upper section has two small holes drilled in the top brass fitting; **I** Lower section has a rubber “foot” at the bottom end; **J** Optional Brass Flag Pole Extender (12”) — to make 9’ Pole; **K** Optional Brass Flag Pole Base.

To Assemble Flag Set


- 1** Screw brass screw **B** and brass screw eye **C** into the holes drilled in the top fitting on the upper flag pole section **H**.




- 4** Screw the finial **A** (Eagle or Cross) to the top of the pole **H**.

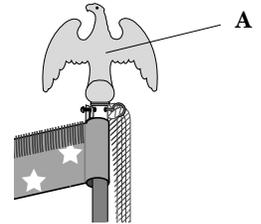


- 2** Find the open sleeve at the back edge of the flag **F**. Slide the flag sleeve over the upper pole section, going from the bottom of the pole to the top, until the flag reaches the brass screw **B**. Find the Velcro tab in the top-inside of the sleeve, pull of the hard plastic portion and discard, and then slip the hole in the Velcro onto the screw — this holds the flag in place at the top of the pole.

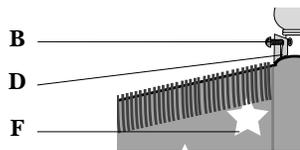

- 5** For 8’ poles, screw the lower pole section **I** to the bottom of the upper section **H**. For 9’ poles, screw the brass pole extender **J** to the bottom of the upper pole section, then screw the lower section to the bottom of the extender. Place completed assembly into the floor base.

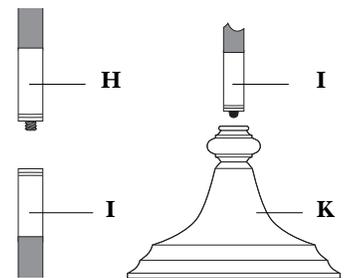

- 3** Affix the tassel cord to the screw eye **C** as shown in the drawing:

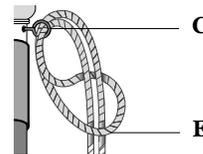

AS311-1



CM ALMY

800.225.2569 www.almy.com